



Handy Instructions

TORQUE WRENCH SET 2 20 NM

- 1) Press release button at the rear of the wrench head and push on the relevant tool bit until a secure connection is achieved.
- 2) Set torque by pulling down release collar and rotating the drive of the wrench until the correct Nm readings align on the drive shaft and drive collar. Release the collar to 'lock' the wrench at the relevant setting.
- 3) Select drive action (clockwise or anticlockwise) with pivot lever at rear of head.
- 4) Gently apply force to the relevant component in the correct direction until a click is felt and heard, and torque is released from the tool. Do not attempt to tighten further!
- 5) Remove tool bit by pressing release button at the rear of wrench head and pulling the tool bit clear.
- 6) After use, re-set wrench to 2.0Nm.

NOTE

Intended only for torque; do not use as a regular wrench.

Tightening components past the wrench release point will damage the tool mechanism and componentry.

When applying force, hold by the pin only. Do not apply pressure to the body of the wrench.